


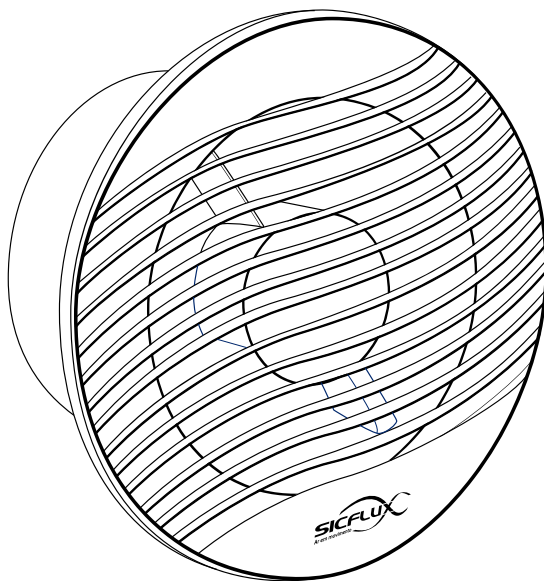

LINHA MEGA, MEGAKIT E MEGA PRO - MODELOS 18/25/34

Congratulations! You've just purchased a SICFLUX product!

Installation Manual



LEARN MORE!



+55 47 3452-3003 / 3452-3033

1 IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS	2
2 MOUNTING AND DISTANCES TEMPLATE	3
3 TABLE OF MOST COMMON PROBLEMS	4
4 MEGA LINE INSTALLATION INSTRUCTIONS	4
5 TYPES OF CONNECTION	6
6 CARING FOR YOUR PRODUCT	6
7 WARRANTY	7
8 RECYCLING	7

contato@sicflux.com.br

posvenda@sicflux.com.br

CUSTOMER SERVICE

sac@sicflux.com.br – V. 11 - 10/2025



[sicflux.official](https://www.facebook.com/sicflux.official)



[sicflux.official](https://www.instagram.com/sicflux.official)



www.sicflux.com.br

1 IMPORTANT SAFETY AND INSTALLATION INSTRUCTIONS

- Check that there is a power outlet near the installation location.
- Ensure that all installation is performed by a qualified professional.
- Do not use your exhaust fan in environments with temperatures above 40°C (104°F).
- Do not block the air inlet or outlet, even when the device is turned off.
- Never insert objects of any kind into the device through the holes and openings. These objects can reach components that conduct electricity, causing short circuits, fires, or electric shocks.
- Your exhaust fan has a fan blade for air movement. Only turn on the exhaust fan when it is installed in its designated location to prevent access to the moving fan blade, thus preventing accidents.
- Never allow children to handle electrical equipment.
- Keep children and animals away from packaging of any kind. • For excellent operation and hearing comfort, install your extractor fan on the ceiling or wall at a height of 2.30 meters from the floor.

ATTENTION!



- This exhaust fan must be installed at least 1 meter from any opening accessible from the discharge duct
- This exhaust fan must be installed with ducts at least 1 meter long.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by persons lacking experience and knowledge, unless they have been given instruction concerning use of the appliance or are under the supervision of a person responsible for their safety. (IEC 60335-1/2006)
- It is recommended that children be supervised to ensure they do not play with the appliance. (IEC 60335-1/2006)
- Ensure the fan is disconnected from the electrical outlet before performing any maintenance. (IEC 60335-2-80/2008)
- Precautions must be taken to prevent reverse flow of this appliance, i.e., installing it in the wrong direction of air flow. (IEC 60335-2-80/2008)
- This appliance does not have a power cord; therefore, it is necessary to incorporate fixed wiring and a means of disconnecting the power supply with a contact separation at all poles that ensures complete disconnection of the product from the power supply. (IEC 60335-1/2006)
- If the power cords are damaged, the appliance must be discarded. (IEC 60335-1/2006)
- Ensure that the tubing used has a diameter equal to the appliance's air outlet. Information on the recommended tubing for each model is found in Table A, page 2 of this manual.

- Make sure to drill the hole in the wall or ceiling with the diameter specified in Table A, as this measurement ensures complete safety regarding the distance between the appliance and the wall or ceiling.
- Electrical wires must be between 1 and 2 mm thick for use with this hood.
- Use wall plugs and screws appropriate for your wall or ceiling, whether masonry, plaster, or other type.

MODEL	WALL/CEILING HOLE DIAMETER	COMPATIBLE PIPE DIAMETER
18	155 mm	150 mm
25	155 mm	150 mm
34	155 mm	150 mm

Table 1.1: Table A.

2 MOUNTING AND DISTANCES TEMPLATE

Use the information below to help you attach the appliance.

Your appliance has four mounting holes. Use all of the holes to attach it to the wall or ceiling. To help you determine where to drill the holes, turn the appliance upside down with the fan blade facing outward and center the hood in the hole drilled in the wall. Using a pencil or similar tool, mark the holes on the wall.

Make sure the appliance is centered in the hole to avoid any obstructions to its operation.

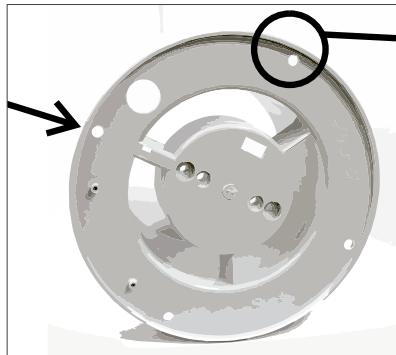


Figure 2.1:

MODEL	PRODUCT FINISH DIAMETER
18/25/34	201 mm

Table 2.1:

3 TABLE OF MOST COMMON PROBLEMS

Follow the suggestions below, and if you experience any difficulties, call our Customer Service Department at 47 3452-3003 or 47 3452-3033.

PROBLEM	RECOMMENDATION
My exhaust fan won't turn on	<ul style="list-style-type: none"> • Check that there are no loose wires in the installation. • Check that there is power in the wires supplying the exhaust fan. • Check that the wiring diagram is correct, as shown in the diagram on page 5.
My exhaust fan seems to be operating slowly.	Check that the wiring diagram is correct, as shown in the diagram on page 5.

Table 3.1: Common Issues

4 MEGA LINE INSTALLATION INSTRUCTIONS

1. At the installation site, drill a hole with a diameter according to Table A for the device attachment and the mounting holes, following the mounting and distance template on page 3 of this manual.
2. Remove the product from the box and pull out the front grille.
3. Remove the electrical center cover from the product. Insert the power wires through the entry hole on the side and pass them between the anchor towers. Replace the anchor cover and secure it. Make sure the wires are securely fastened and the cover is fully seated. (The anchor cover and screws are supplied with the product in a bag.)
4. Perform the electrical connection. Connect the appliance to your electrical network (127/220 V AC) as per the wiring diagram on page 5. Use the provided twist-on connectors to ensure electrical safety.

5. Close the electrical box cover with the screw.

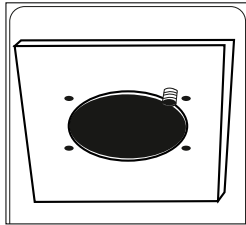


Figure 4.1:

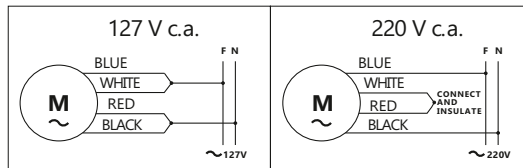


Figure 4.2: Connection Diagram

6. Place the appliance in the desired location and secure it.
7. Install the front grille.
8. Finish the exterior (not included).

5 TYPES OF CONNECTION

Wall installation for direct exhaust.

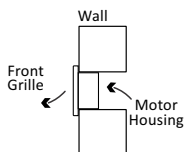


Figure 5.1:

Installation in a shared duct.

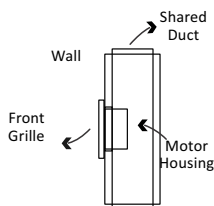


Figure 5.2:

Ceiling installation.

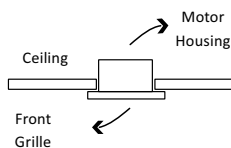


Figure 5.3:

6 CARING FOR YOUR PRODUCT

To keep your hood clean, simply wipe it with a slightly damp cloth and then dry it.

The fan blade should be cleaned regularly to prevent the following problems:

- Decreased efficiency; Excessive noise level; Reduced lifespan; and Void the warranty.
- All cleaning should be performed with the appliance disconnected from the power supply.

7 WARRANTY

WARRANTY PERIOD:

The warranty period is 9 months in addition to the 90-day legal warranty, totaling 1 year.

WHAT THE WARRANTY COVERS:

The warranty covers manufacturing and assembly defects, provided the devices are used under normal conditions by the consumer. Furthermore, the warranty fully covers labor and parts for repairs of defects determined to be manufacturing defects.

Shipping costs are the customer's responsibility.

WARRANTY EXCLUSIONS:

Normal wear and tear of parts, abuse and misuse of the product, improper installation, modification of any kind without written authorization, scratches, broken parts due to misuse, and lack of cleaning of the part are not covered by the warranty.

HOW TO REQUEST A WARRANTY COVER:

Consumers must request warranty service by calling 47 3452-3003 or 47 3452-3033 or emailing sac@sicflux.com.br. The user must inform the problem encountered, the product purchased, the product batch number (found on the box or label attached to the product), and the purchase receipt.

It is essential to present the original, dated receipt, without alterations, tampering, or erasures, as this is the only document with which warranty claims can be made.

8 RECYCLING



Our commitment to future generations requires us to recycle materials. Don't forget to recycle the packaging and any remaining parts.

This product contains electrical parts and should not be disposed of in regular trash.